

unD6IO

4x2 Multi-IO Dante® Wall Plate Interface



User Manual

Date 5/13/2016

Revision 02

© Attero Tech, LLC
1315 Directors Row, Suite 107, Ft Wayne, IN 46808
Phone 260-496-9668 · Fax 260-496-9879
www.atterotech.com

614-00029

IMPORTANT SAFETY INSTRUCTIONS

The symbols below are internationally accepted symbols that warn of potential hazards with electrical products.



This symbol, wherever it appears, alerts you to the presence of un-insulated dangerous voltage inside the enclosure -- voltage that may be sufficient to constitute a risk of shock.



This symbol, wherever it appears, alerts you to important operating and maintenance instructions in the accompanying literature. Please read the manual.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord (Ethernet cable) from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by Attero Tech
11. Unplug this apparatus during lightning storms.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. If rack mounting, provide adequate ventilation. Equipment may be located above or below this apparatus but some equipment (like large power amplifiers) may cause an unacceptable amount of hum, or may generate too much heat and degrade the performance of this apparatus.



TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

LIMITED TWO YEAR WARRANTY

The equipment is warranted for two year from date of purchase from Attero Tech, LLC against defects in materials or workmanship. This warranty does not cover equipment which has been abused or damaged by careless handling or shipping. This warranty does not apply to used or demonstrator equipment. Should any defect develop, Attero Tech, LLC will, at our option, repair or replace any defective parts without charge for either parts or labor. If Attero Tech, LLC cannot correct the defect in the equipment, it will be replaced at no charge with a similar new item. Attero Tech, LLC will pay for the cost of returning your equipment to you. This warranty applies only to items returned to Attero Tech, LLC, shipping costs prepaid, within two year from the date of purchase. This Limited Warranty is governed by the laws of the State of Indiana. It states the entire liability of Attero Tech, LLC and the entire remedy of the purchaser for any breach of warranty as outlined above. NEITHER ATTERO TECH, LLC NOR ANYONE INVOLVED IN THE PRODUCTION OR DELIVERY OF THE EQUIPMENT SHALL BE LIABLE FOR ANY INDIRECT, SPECIAL, PUNITIVE, CONSEQUENTIAL, OR INCIDENTAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THIS EQUIPMENT EVEN IF ATTERO TECH, LLC HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL THE LIABILITY OF ATTERO TECH, LLC EXCEED THE PURCHASE PRICE OF ANY DEFECTIVE EQUIPMENT.

This warranty gives you specific legal rights. You may have additional legal rights which vary from state to state.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules and EN55022. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at their own expense



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the business where you bought this product.



Names and Contents of Toxic Hazardous Substances or Elements

Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (CR(VI))	Polybrominated Biphenyl (PBB)	Polybrominated Diphenylether (PBDE)
PCBs	X	0	0	0	0	0
Metal Parts	X	0	0	0	0	0
Plastic Parts	0	0	0	0	0	0
Speakers	X	0	0	0	0	0
Cables	X	0	0	0	0	0
0: Indicates that this toxic or hazardous substance contained in all of the homogenous materials for this part is below the limit requirement in SJ/T 11363-2006						
X: Indicates that this toxic or hazardous substance contained in at least one of the homogenous materials used for this part is above the limit requirement in SJ/T 11363-2006.						

Contents

1 - Overview.....	4
1.1 - What's in the Box	6
1.2 - Optional Extras.....	6
1.3 - Device Features	7
1.4 - Mounting and Installation	8
1.5 - Error Reporting.....	9
1.6 - Hardware Connections	9
1.6.1 - Balanced Output to a Balanced Input.....	9
1.6.2 - Balanced Output to an Unbalanced Input	9
2 - Device Configuration	10
2.1 - IP Address Setup	10
2.2 - Software Control	11
2.3 - 3 rd Party Control	11
2.4 - Control Interface Type	11
2.4.1 - Using the Command interface	11
3 - ARCHITECTS & ENGINEERING SPECIFICATION.....	12
3.1 - unD6IO A&E Specifications	12
3.2 - Device Specifications.....	1
APPENDIX A - Reference Documents.....	A-1

1 - Overview

The unD6IO Dante™ Audio interface is 4x2 Dante multi-I/O wall plate interfaces designed for in-wall installation into 2-gang US junction boxes. Its form-factor and I/O density make it easy to put Dante connectivity close to audio sources used in professional AV installations – thereby eliminating costly and interference prone analog wiring, power supplies and giving a clean, finished look to an AV installation all while providing the superior audio system flexibility with Dante audio networking.



Figure 1 - unD6IO Overview

The unD6IO features two balanced line-level inputs on XLR connectors. Each input features a software controlled mic preamp with software switchable 48V phantom power.

The unD6IO also features two sets of stereo line-level audio connections for consumer audio device connectivity. The RCA inputs (IN 3/4 A) and 3.5mm stereo input (IN 3/4B) are software selectable to be used as two independent stereo inputs, or summed as shown in the following signal flow diagram.

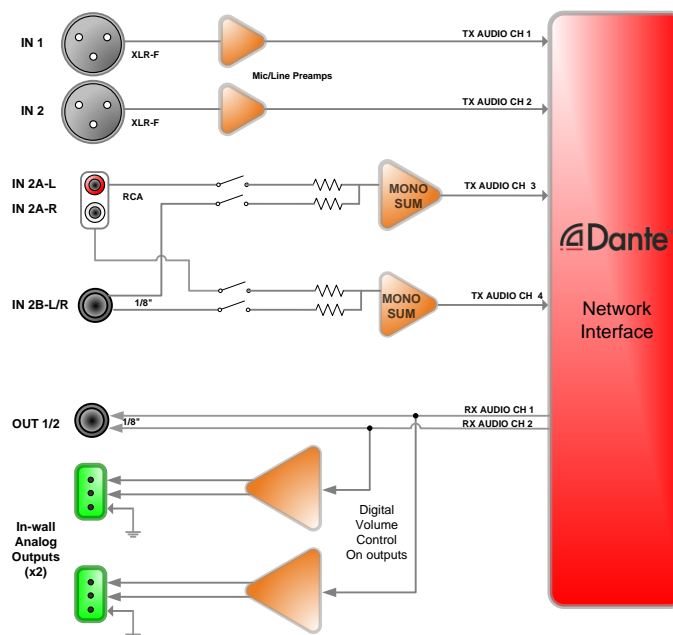


Figure 2 - unD6IO Signal Flow Diagram

™ Dante is a trademark of Audinate Pty. Ltd.

User Manual

All four input paths from both the balanced and unbalanced inputs are digitized and then introduced as discrete channels on the Dante network. In addition to the input functionality, the unD6IO also features two output channels which can be received independently from the Dante network. The outputs are available on the front panel via a 3.5mm stereo jack output connector and also on a 6-way de-pluggable Phoenix style connector on the side of the unit. The Phoenix audio output connections are intended for use with a companion wall plate (*sold separately*) and installed in a 3-gang junction box.

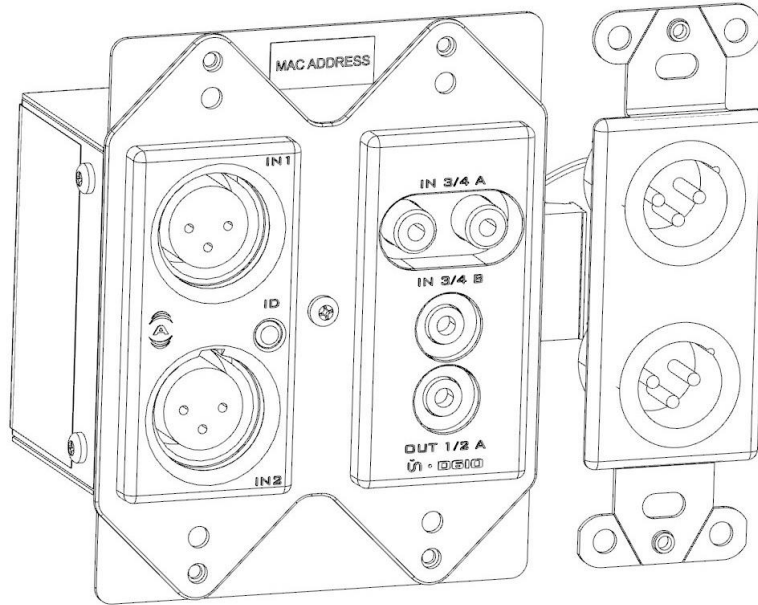


Figure 3 - unD6IO with unAX20 Plate (Front)

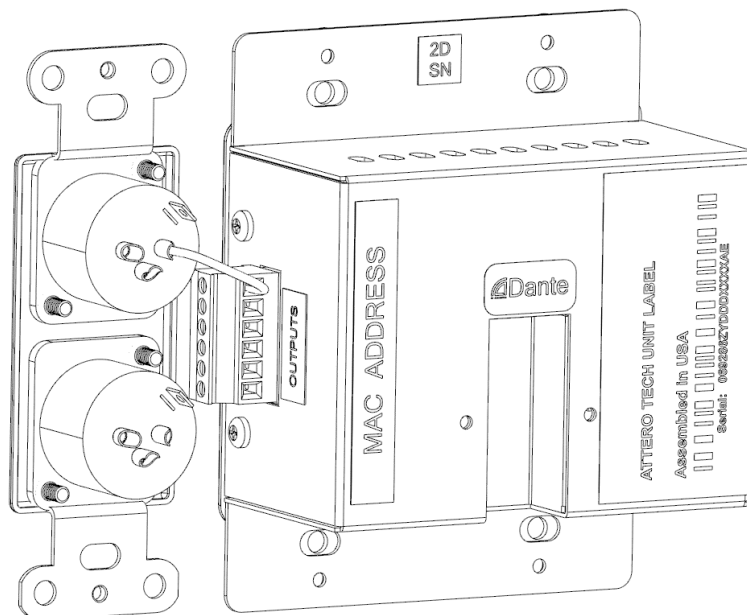


Figure 4 - unD6IO with unAX20 Plate (Rear)

Connection to the Dante network is provided by a single Ethernet RJ45 connector on the back of the unit. The unD6IO is PoE-enabled which allows the unD6IO to be powered over its network cable from a suitable PoE source (IEEE 802.3af) eliminating the need for a local power supply. This is particularly useful as the unD6IO can then be mounted in remote location where access to a mains outlet would be limited or indeed, non-existent.

Audinate's Dante Controller or other 3rd party manufacturer's Dante routing software can be used to control the audio routing configuration of the device while the Atterotech unIFY Control Panel application (V2.0 or later) or supporting DSP partner software can be used to configure the device-specific features.

The unD6IO also supports third party control systems allowing external configuration of its settings such as phantom power and input gain in real time. Further information on 3rd party control can be found later in this document in section 2.3 - 3rd Party Control.

1.1 – What's in the Box

The device comes supplied with the following:


- (1) unD6IO
- (1) 2-gang Decora cover plate cover w/mounting screws
- (1) 6-position Phoenix plug connector

1.2 – Optional Extras

The following are available as options for the unD6IO and that may be ordered separately:

- unAX20 - Passive Dual XLR Male single gang Decora wall plate - P/N: 900-00187-01
(Comes with 3-gang Decora cover plate).

1.3 - Device Features

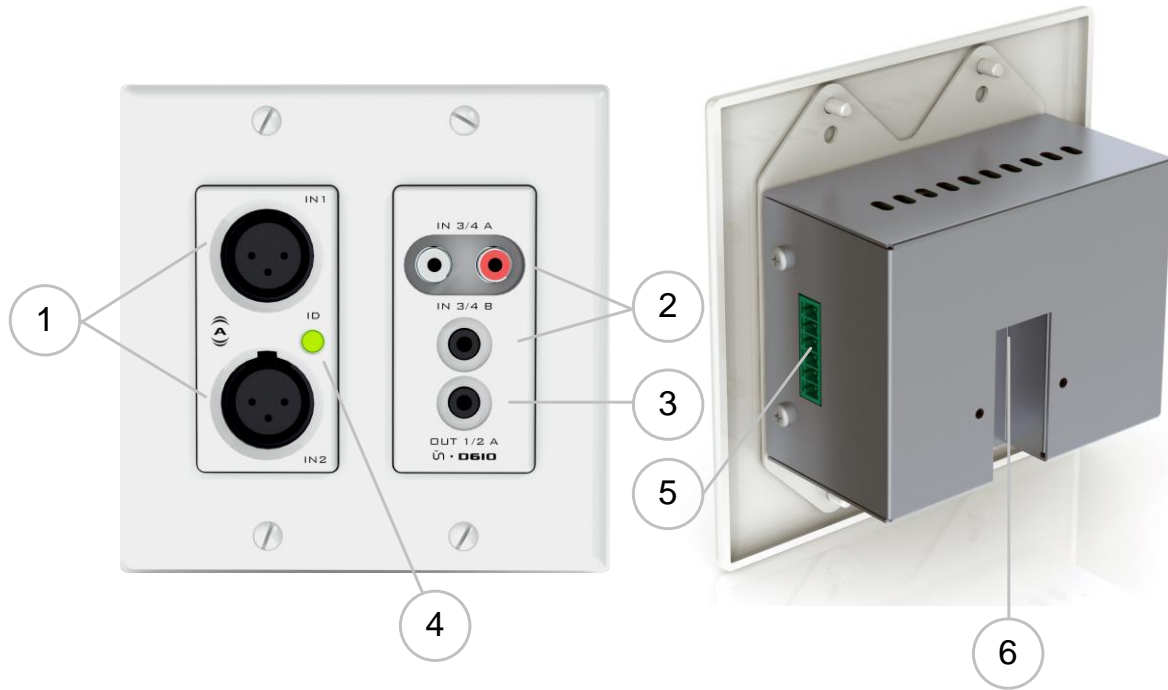

1	XLR Balanced Mic/Line inputs 1/2
2	Stereo unbalanced line level inputs 3/4 A&B
3	3.5 mm stereo unbalanced outputs 1/2 A
4	Front panel POWER & ID LED status indicator
5	In-wall balanced audio line outputs on de-pluggable Phoenix connectors (Outputs 1/2 B)
6	Recessed RJ-45 connector

**Note: The unD6IO has a label on the front of the metal housing at the top that shows the device's MAC address. This is important for initial device identification as the last six digits make up part of the device's default network name that is shown when the device is detected by Dante Controller. The full MAC address is also given on the back of the unit.*

1.4 - Mounting and Installation

A typical installation will involve mounting the wall plate into a pre mounted 2-gang or larger wall box, standard drywall bracket or mud ring. Before starting, make sure the wall box where the unD6IO is to be installed is pre-wired with a suitable CAT5e or better cable back to a PoE-enabled network switch or mid-span injector. If a mid-span injector is being used, the cable should be connected to the port that supplies both Ethernet and power (refer to the mid-span injectors manual if unsure which port is which). The unD6IO packaging includes all of the necessary screws for mounting the product and the included Decora wall plate.

Attach the network cable from the switch/mid-span injector to the Dante I/F port of the Dante unD6IO. If the switch or mid-span injector is already running and PoE is enabled, the unit should power up and the green ID LED on the front of the device should turn on.

With the cable attached, carefully place the unD6IO into the wall box taking care to not trap the cabling. Once fully in place, secure it with the screws provided. Once the unit is secured in the wall box, fit the Decora plate over the front of the unit and secure it with the screws provided with it. It is recommended to not over-tighten the screws that attach the included Decora wall plate to prevent cracking it.

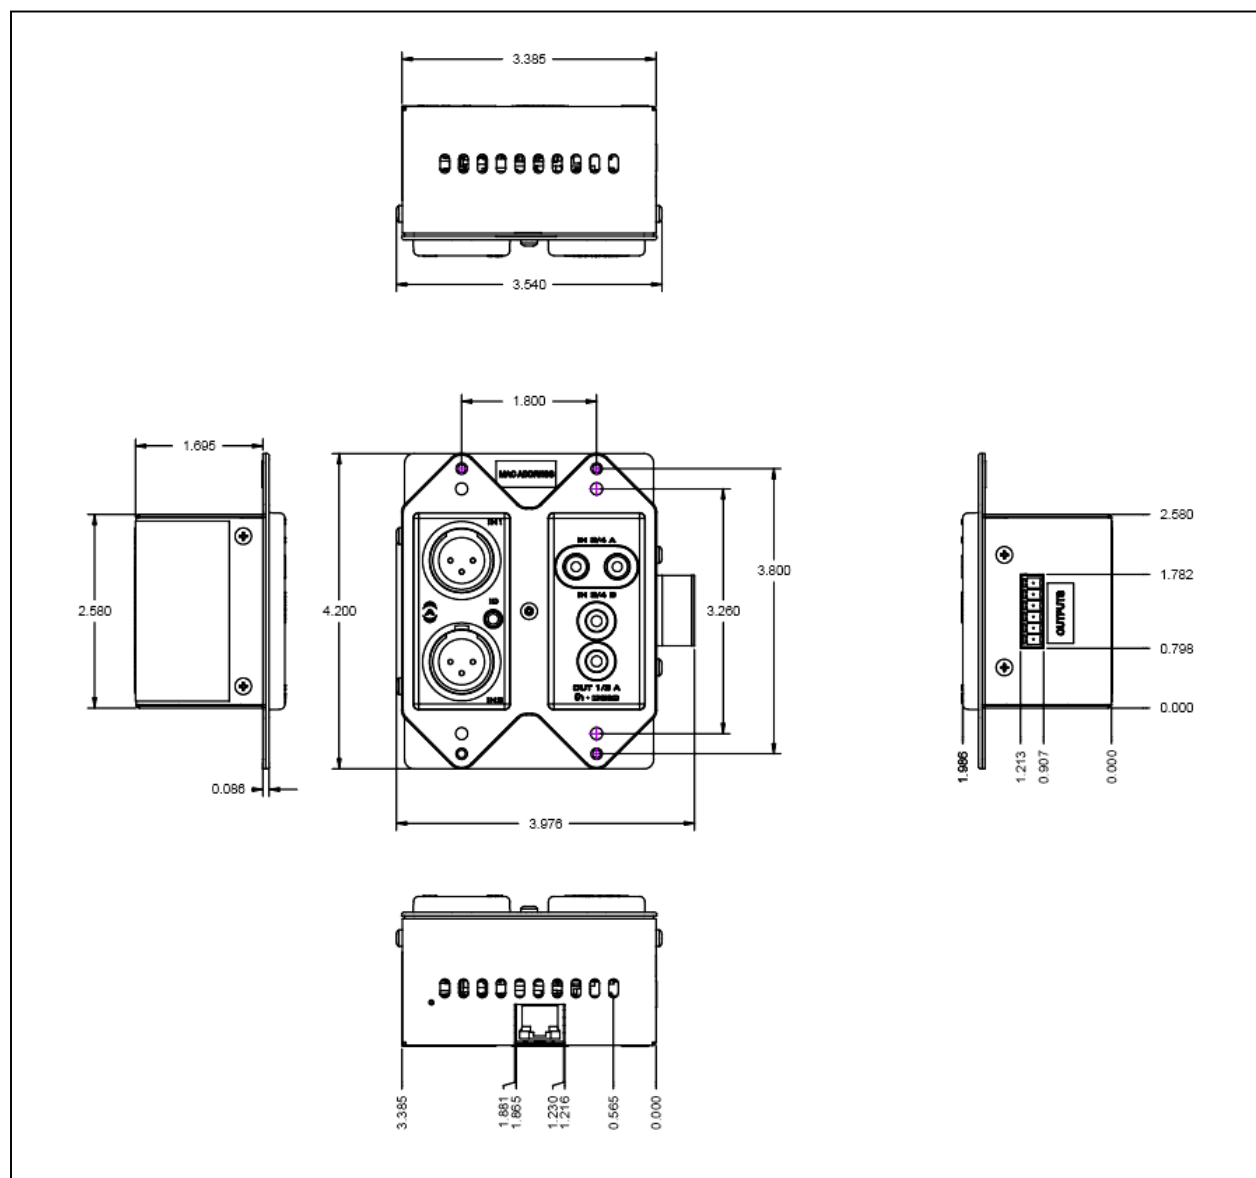


Figure 5 - Dimensioned Drawing

1.5 – Error Reporting

The unD6IO is equipped with error reporting features. Upon power up, the front panel power LED will briefly light red and then change to green if the device boots successfully. If the LED remains on solid red, this indicates a device failure. If power cycling the unit does not correct this problem, contact Attero Tech technical support.

1.6 – Hardware Connections

The unD6IO provides balanced audio outputs to external analog audio equipment. Refer to the following diagrams and instructions for connecting different types of audio devices to the outputs of the unD6IO. Professional grade audio cabling is recommended to achieve the best audio performance throughout the system.

1.6.1 – Balanced Output to a Balanced Input

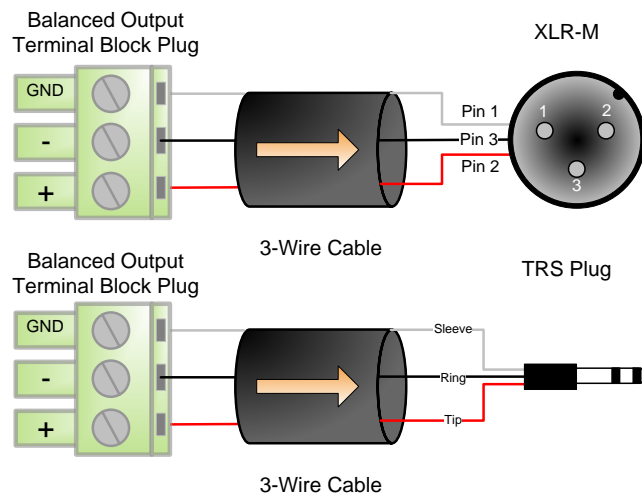


Figure 6 - Balanced Wiring Guide

1.6.2 – Balanced Output to an Unbalanced Input

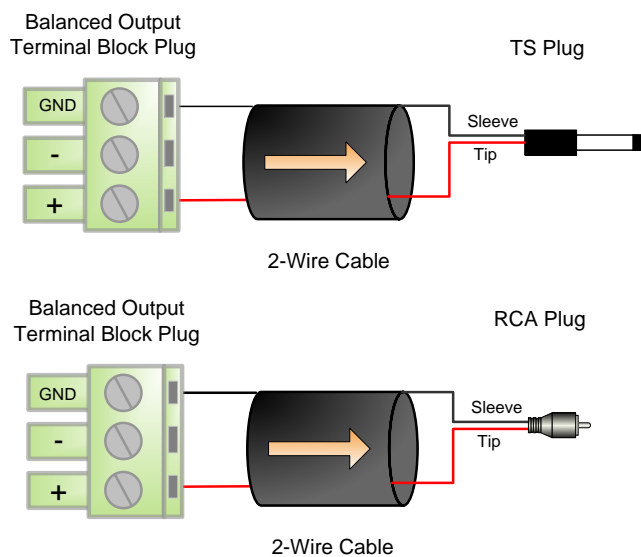


Figure 7 - Unbalanced Wiring Guide

2 – Device Configuration

Certain 3rd party manufacturers provide audio routing functionality from within their own configuration application. Check the applications manual/help or contact the manufacturer in question to see if this is supported. If not supported by a 3rd party tool, the audio routing may be carried out using Audinate’s Dante Controller. Dante Controller can be obtained from the Audinate website (www.Audiante.com) and is available for both Mac and PC. Instructions on how to use this application and about setting up routes on a Dante network can also be found on Audinate’s website.

**Note: When using Dante controller, the unD6IO will be shown using a default device name of “unD6IO-#####” where ‘#####’ is the last six characters of the devices MAC address.*

2.1 – IP Address Setup

***** **IMPORTANT** *****
 Failure to correctly configure IP addresses will not allow an unD6IO device to correctly authenticate in the unIFY Control Panel software and while it will show up in Dante Controller, the devices parameters will not be available. The input and output channels also won’t be visible and routing of audio to and from the device will not be possible.

In order to configure an unD6IO, both to set up internal parameters and also setup audio routing, the PC/Mac will need to be able to communicate with the devices over the network. While all Dante devices will be discovered regardless of the IP address setup on the PC or Mac, communication can only occur if the PC/Mac and the device have compatible IP addresses.

By default, the unD6IO is set to get a dynamic IP address. As with all Dante devices, if the unD6IO does not find a DHCP server to retrieve an IP address from, it will give itself an local link address sometimes also known as an automatic private IP address (APIPA) instead. A local link IP address is always in the range 169.254.x.y.

To ensure communication, the PC/Mac can either be set to get a dynamic IP address, or be given a static IP address in the range 169.254.x.y. The PC may require a restart if its IP address is changed for the change to take effect.

In some applications, IP addresses of devices may need to be set to something specific and that can be done once initial communication has been established. Bear in mind however that if a static IP address is assigned to a device and that static IP address is in a different range to the IP it was previously using to communicate with the PC/Mac, the PC/Mac will lose communication with the device until such time as the PC/Mac IP address is also changed to an IP in range of the devices new IP address.

Further information on IP setup for an audio system using Dante can be found in the FAQ’s on the Audinate website (<https://www.audinate.com/resources/faqs>).

2.2 – Software Control

The unD6IO device parameters such as preamp control and input switching are fully supported in Attero Tech's unIFY Control Panel software (V2.0 or later). Refer to the Help documentation within the unIFY application for support.

2.3 – 3rd Party Control

The unD6IO supports 3rd party control allowing external system to manage the unD6IO's settings such as phantom power, mic/line gain options and control of presets.

There are two control interface types available for the unD6IO. The first type is a Dante proprietary interface (-C) which is typically used by devices already that have built-in support for Attero Tech devices. The second type supports a 3rd party UDP interface (-U) and is available to anyone to use with any device capable of sending and receiving UDP messages.

Information on the commands the unD6IO supports as well as details of how to use the 3rd party UDP interface can be found in the unIFY 3rd party Software API document, available from the registered users section of the Attero Tech website (Go to www.atterotech.com and click on the log-in option).

2.4 – Control Interface Type

The type of control interface a specific unD6IO supports is defined by the Dante firmware it has been loaded with. Refer to the Help documentation within the unIFY Control Panel software for details on how to determine the control interface type that your device actively supports.

A devices initial control interface is chosen when ordering the unit. However, it can be easily changed though once the unit is in the field by updating the device's Dante firmware. The tools and necessary firmware files for updating a device's control interface can be obtained from the registered users section of the Attero Tech website (Go to www.atterotech.com and click on the log-in option). The firmware files have an extension .DNT (otherwise known as "donut" files) and there is one for each control interface type.

2.4.1 – Using the Command interface

In order to make use of the control interface, regardless of type, the unD6IO and the controlling device need to be on the same physical subnet and need to have IP addresses in the same range. The control devices should then be able to converse with the unD6IO without any further configuration necessary.

If control device is on a separate network to keep the Dante traffic separate, remote control of the unD6IO can still be achieved by using Attero Tech's CommandHub product (see the Attero Tech website for more details).

3 – ARCHITECTS & ENGINEERING SPECIFICATION

3.1 – unD6IO A&E Specifications

The Dante 2-gang wall plate interface unit shall provide two front panel mounted mic/line analog inputs on XLR. Selectable gains of -18dB, -3dB, +25dB, and +40dB and a +48V phantom power option shall be provided via software for each balanced mic/line input. These mic/line inputs are digitized and introduced to the Dante audio network as transmit channels 1 and 2.

The device shall also provide two sets of unbalanced line level input connections: one on a set of RCA connectors, the other using a stereo 3.5mm TRS connection. These inputs are selectable for independent or summed operation via software and introduced to the Dante interface on Dante transmit channels 3 and 4. The internal analog to digital signal conversion shall be performed at 24-bit resolution with a sampling frequency of 48 kHz.

The Dante interface unit shall provide two balanced analog inputs on the side of the in-wall enclosure via a 6-pin depluggable Phoenix-style connector for analog conversion of up to 2 Dante digital audio network channels. Additionally, the two received Dante output channels shall also be converted and output on a front panel mounted 3.5mm stereo TRS connector. The internal digital to analog signal conversion shall be performed at 24-bit resolution with a sampling frequency of 48 kHz.

The Dante interface unit shall receive power over the Ethernet cable from an IEEE 802.3af PoE compliant network switch or midspan injector.

The Dante interface shall be compliant with the RoHS, WEEE and REACH directives. The Dante interface unit shall be Compliant with the EMI/EMC requirements for FCC and CE.

The Dante interface unit shall be the Attero Tech unD6IO.

3.2 – Device Specifications

Audio Inputs	
Input Types:	Two Balanced and RF filtered inputs on XLR (<i>Inputs 1/2</i>) Stereo Unbalanced Inputs on RCA (<i>Inputs 3/4 A</i>) Stereo Unbalanced Inputs on 3.5mm TRS (<i>Inputs 3/4 B</i>)
Gain:	-18dB, -3dB, +25dB and +40dB, software selectable (<i>Inputs 1/2</i>)
Input Impedance:	>1.8K Ohms at any gain (<i>Inputs 1/2</i>) >10k Ohms (<i>Inputs 3/4 A & B</i>)
Maximum Input Levels:	+20dBu @ -18dB gain, +6dBu @ - 3 dB gain, -23dBu @ +25dB gain -38dBu @ +40dB gain (<i>Inputs 1/2</i>) +12 dBu (<i>Inputs 3/4 A & B</i>)
Phantom Power:	+48V, software selectable (<i>Inputs 1/2 only</i>)
Audio Input Performance	
EIN:	-115 dBu (<i>Mic Inputs 1/2</i>)
THD+N:	< 0.02% @ 1kHz for all gain settings, input signal 3dB below maximum. (<i>Mic Inputs 1/2</i>) <0.01% (<i>Line Inputs 3/4</i>)
Frequency Response:	20Hz - 20kHz, +/- 1dB (-18 and - 3 dB gain on <i>Inputs 1/2</i>) 50Hz - 20kHz +/- 1dB (+25dB and +40dB gain on <i>Inputs 1/2</i>) 20Hz - 20kHz, +/- 1dB (<i>Inputs 3/4 A & B</i>)

Audio Outputs	
Output Type:	Two balanced line level with automatic muting on loss of Dante signal on 6-pin Depluggable Phoenix (<i>Outputs 1/2 B</i>) Two unbalanced line level outputs on stereo 3.5mm TRS (<i>Outputs 1/2 A</i>)
Attenuation Range:	Software controlled volume (<i>0 to -60dB, 1dB increments</i>)
Output Impedance:	200 Ohms balanced, 100 Ohms unbalanced
Maximum Output Levels:	+12 dBu at 0dB attenuation (<i>Output 1/2 A</i>) +20dBu at 0dB attenuation (<i>Output 1/2 B</i>)
Audio Output Performance	
Dynamic Range:	>97 dB
THD+N:	<0.01% @ 1kHz, input signal 3dB below maximum
Frequency Response	20Hz - 20kHz, +/- 1dB (-18dB and - 3dB gain) 50Hz - 20kHz +/- 1dB (+25 and +40 dB gain)

Dante Network	
Physical Level:	Standard Ethernet
Connector:	Single RJ-45
Cable Quality:	CAT-5e or better
Transmission Speed:	100 Mbps
Supported Sample Rates	44.1kHz 48kHz
Minimum Dante Network Latency	1ms
Power Requirements	
PoE	802.3af PoE PD compliant
Power Consumption	5.5W Max
Cable Quality:	CAT-5e or better

Physical Dimensions	
Width	3.54"
Height	4.2"
Depth	2"
Weight	0.6 lbs.
Product Compliance	
FCC CFR 47 Parts 15B Class A ICES-003 CE (EN55022) RoHS REACH	

APPENDIX A – Reference Documents

The following table lists the relevant reference documents.

Document Title	Location
unIFY 3 rd Party Software API	Registered users area on website
Dante Firmware Update Quick Start	Registered users area on website